









 

 





## Recommended Minimum Spare Parts List 50PF LPG Fusion Furnace

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	Ceramic Anchor 3" (Complete Assembly) (Set of 8)	2	PC128008
	Flame Controller LME44.056C2	2	RFLME440
	Foot Pedal (Festo)	1	RF357FFP
	Furnace Tile, 700 x 610 x 22mm (Suit 25 & 50PF Furnace)	10	LFT70022
	Igniter Rod (LPG)	2	RF208FF5
	Ignition Lead (Copper Cord) (Per metre)	5	RF217000
	Ignition Transformer, TC1LVCA	1	RTC1L926
	Superwool Ceramic Fibre Blanket 25mm 7.6m x 610mm	1	JB128025
	Solenoid Valve (Complete)	4	LPGASCOV
	Temperature Controller RKC100CB	1	RF381RKC

## Recommended Minimum Spare Parts List 50PF LPG Fusion Furnace

<i>Image</i>	<i>Description</i>	<i>Suggested Stock Qty.</i>	<i>Part Number</i>
	Thermocouple Element, Type K. 310mm	6	PF201FF1
	Thermocouple Head (1/2")	1	RJB35TCH
	Thermocouple Sheath (Inconel)	4	PF203FF2
	U.V. Amp Meter	1	RF373UVA
	U.V. Amplifier AGQ3.1A27	2	RAGQ31A2
	U.V. Cell, (Flame Detector) QRA.2	4	RF204FF3
	Parts Packaging & ISPM15 Certified Wood Crate	1	ZZPCRATE